
制作说明: A4对折

封面纸质:铜板纸

USER MANUAL

APE/S

HYBRID SOLAR INVERTER

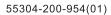

5. Commissioning


Parallel in single phase

Step 1: Check the following requirements before commissioning:

- # Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.
- Step 2: Turn on each unit and set "PAL" in LCD setting program 4 of each unit. And then shut down all units.

NOET: It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on each unit.

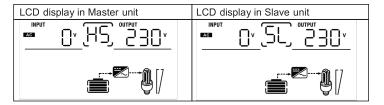

NOTE: Master and slave units are randomly defined.

Table Of Contents

1	About This Manual	1
	1.1 Purpose	1
	1.2 Scope	1
2	Safety Instructions	1
3	Introduction	2
	3.1 Features	2
	3.2 Basic System Architecture	2
	3.3 Product Overview	3
4	Installation	
	4.1 Unpacking And Inspection	6
	4.2 Preparation	
	4.3 Mounting The Unit	6
	4.4 Battery Connection	
	4.5 Ac Input/Output Connection	
	4.6 PV Connection	9
	4.7 Final Assembly	
5	Operation	
	5.1 Power On/off	
	5.2 Operation and Display Pane	. 12
	5.3 LCD Setting	19
	5.4 Battery Equalization Description	2
	5.5 Fault and alarm description	3
6	Trouble removeal	. 3
7	Technical datasheet	. 3
A	ppondix I:Parallel function	. 3
	1 Mounting the Unit	. 3
	2 Wiring Connection	.3
	3 PV Connection	.4
	4 LCD Setting and Display	
	5 Commissioning	4

4. LCD setting and display

Setting Program:


Program	Description	Selectable option	
		Single:	When the units are used in parallel with single phase, please select "PAL" in program 4.
	AC output mode *This setting is only available when the inverter is in standby mode (Switch off).	Parallel:	It is required to have at least 3 inverters or maximum 9 inverters to support three-phase equipment. It's required to have at least one inverters in each phase
04		L1 phase:	or it's up to four inverters in one phase please-2 for detailed information. Please select "3P1" in program 4 for the inverters connected to phase, "3P2" inprogram 4 for the inverters connected to L2 phase
		L2 phase:	and "3P3" in program 4 for the inverters connected to L3 phase. Be sure to connect share current cable
		L3 phase:	to units which are on the same phase. Do NOT connect share current cable between units on different phases.
		U4 <u>3P3</u>	Besides, power saving function will be automatically disabled.

Fault code display

Fault Code	Fault Event	Icon on
60	Power feedback protection	[6]
71	Firmware version inconsistent	
72	Current sharing fault	
73	Inconsistent output voltage settings in parallel-connected systems	
80	CAN fault	
81	Hostloss	
82	Synchronization loss	
83	Battery voltage detected different	
84	AC input voltage and frequency detected different	
85	AC output current unbalance	
86	AC output mode setting is different	


-45-

Communication Connection

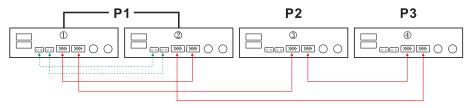


One inverter in each phase:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

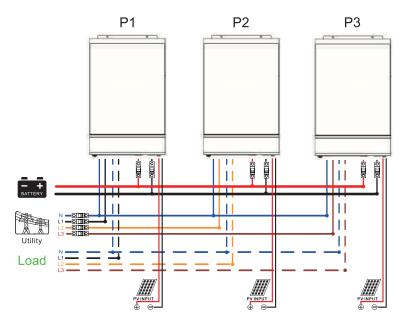

Communication Connection

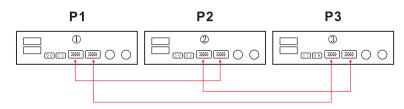

WARNING:Do not connect the current sharing cable between the inverters which are in different phases. Otherwise, it may damage the inverters.

3. PV Connection

Please refer to user manual of single unit for PV Connection CAUTION:Each inverter should connect to PV modules separately.

1 About This Manual

1.1 Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations, Keep manual for future reference.

1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

2 Safety Instructions



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

- 1. Before using the unit read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
- CAUTION-To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries.Other types of batteries may burst, causing personal injury and damage.
- 3. Do not disassemble the unit Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
- 4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- 5. CAUTION-Only qualified personnel can install this device with battery.
- 6. **NEVER** charge a frozen battery.
- 7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
- 8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
- 9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals, Please refer to INSTALLATION section of this manual for the details
- 10. One piece of 150A fuse is provided as over-current protection for the battery supply.
- 11.GROUNDING INSTRUCTIONS -This inverter/ charger should be connected to a permanent grounder wiring system. Be sure to comply with local requirements and regulation to install this inverter.
- 12.NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
- 13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

3 Introduction

This is a multi-function Inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

3.1 Features

- Pure sine wave inverter
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload/Over temperature/short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function


3.2 Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:


- Generator or Utility
- PV modules

 $Consult\ with\ your\ system\ integrator\ for\ other\ possible\ system\ architectures\ depending\ on\ your\ requirements.$

This inverter can power all kinds of appliances in home or environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

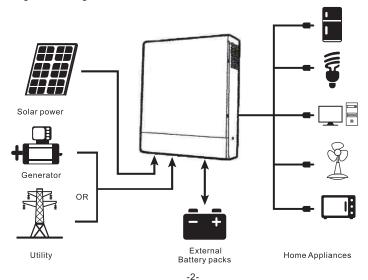


Communication Connection

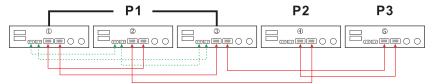


Two inverters in two phases and only one inverter for the remaining phase:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

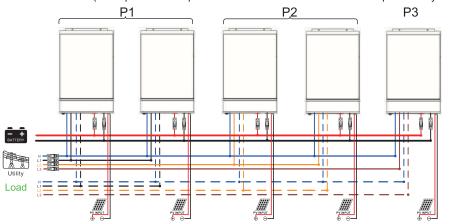


Communication Connection

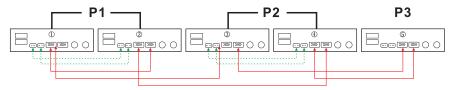

Two inverters in one phase and only one inverter for the remaining phases:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

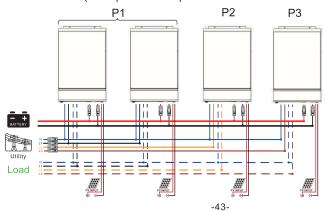


Communication Connection




Three inverters in one phase, two inverters in second phase and one inverter for the third phase:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

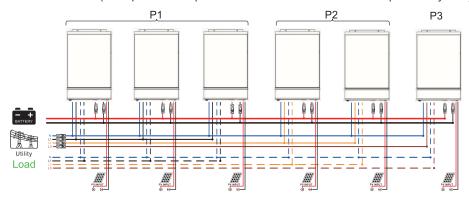


Communication Connection

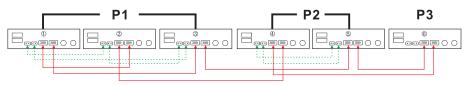


Three inverters in one phase and only one inverter for the remaining two phases:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

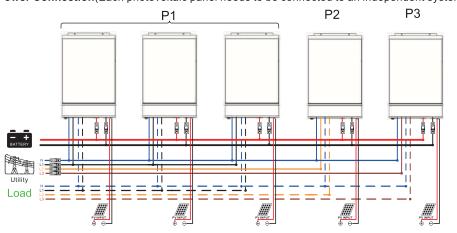


3.3 Product Overview


3.3.1 LCD Screen

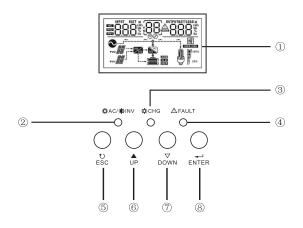


1LCD display	5ESC
2Status indicator	6UP
3Charging indicator	7DOWN
4Fault indicator	8ENTER

3.3.2 Back Panel

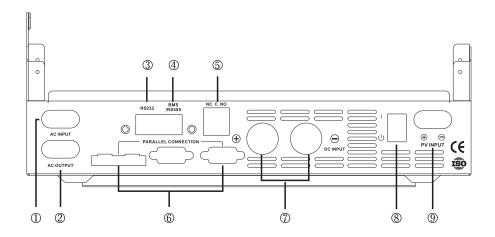

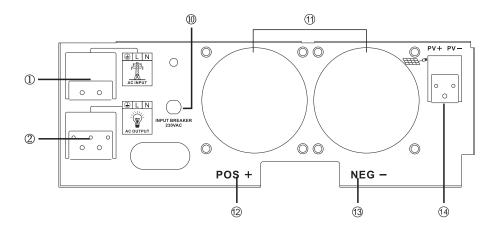

Dual Output Back Panel

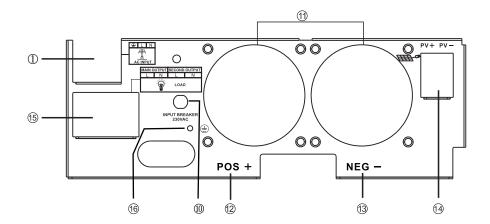

- 1..... AC Input
- 2..... AC Output
- 3.....Communication Port
- 4.....BMS/RS485 Communication Port
- 5.....Dry Contact
- 6.....Parallel connection
- 7.....Battery Input
- 8.....Power ON/ OFF Switch


- 9.....PV Input
- 10...Input Breaker
- 11...Fan
- 12...Battery Terminal Positive
- 13...Battery Terminal Negative
- 14...Solar Panel Input
- 15...AC Main/Second Output
- 16...Output ground wire

Communication Connection




Two inverters in each phase:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

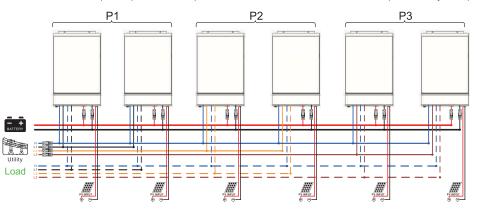


Communication Connection

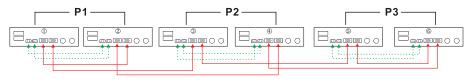

Four inverters in one phase and one inverter for the other two phases:


Power Connection (Each photovoltaic panel needs to be connected to an independent system)

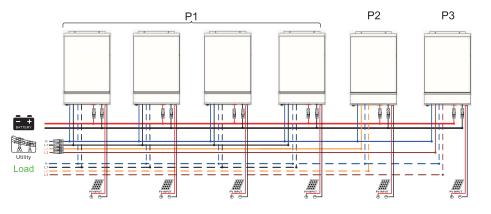

Communication Connection



Three inverters in one phase, three inverters in second phase and two inverters for the third phase: **Power Connection**(Each photovoltaic panel needs to be connected to an independent system)

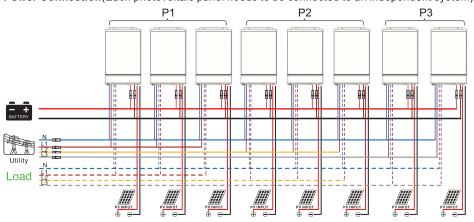



Communication Connection




Three inverters in one phase, two inverters in second phase and two inverters for the third phase:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

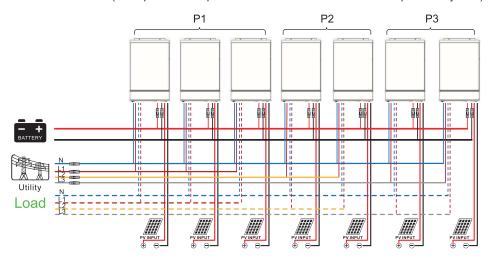

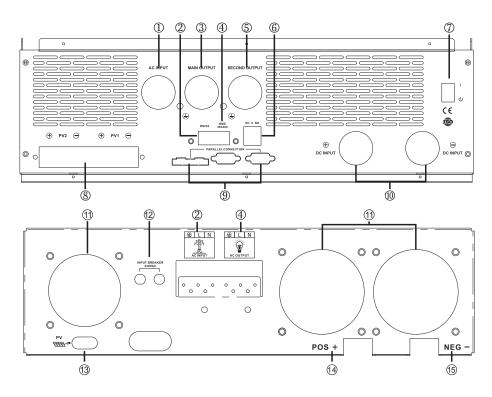

Dual Output Back Panel

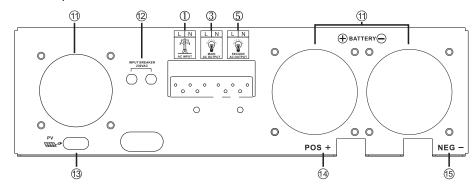

- 1.....AC Input
- 2.....RS232 Communication Port
- 3.....Main output
- 4.....BMS/RS485 Communication Port
- 5.....Second Output
- 6.....Dry Contact
- 7.....Power ON/OFF Switch
- 8.....Solar Panel Input

- 9.....Parallel connection
- 10...Battery Input
- 11...Fan
- 12...Input Breaker
- 13...PV Input
- 14...Battery Terminal Positive
- 15...Battery Terminal Negative

4 INSTALLATION


4.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- ♦ The unit x 1
- ♦ User manual 1

4.2 Preparation


Before connecting all please take off bottom cover by removing two screws as shown below.

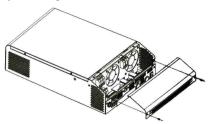

4.3 Mounting the Unit

Consider the following points before selecting where to install:

- ※ Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- * The ambient temperature should be between and to ensure optimal operation.
- * The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

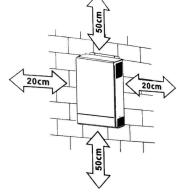




SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

Install the unit by screwing three screws.

- 1,2 Use the M6*80mm expansion bolts.
- 3 Use M4 or M5.

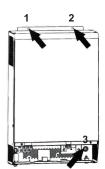


Communication Connection



Seven to nine inverters in parallel:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

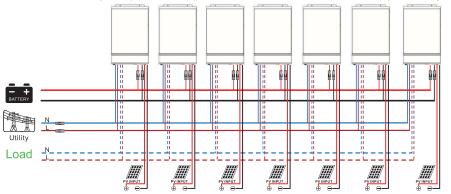

Communication Connection

Seven inverters in parallel




Ø Nine inverters in parallel




2-2 Support 3-phase equipment

Three inverters in each phase:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

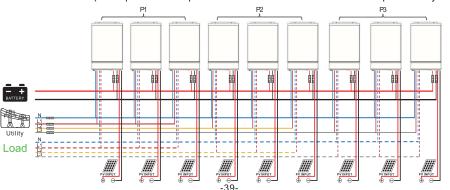


Communication Connection

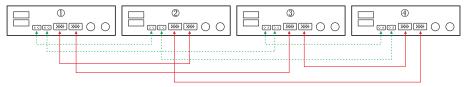

Five inverters in parallel:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

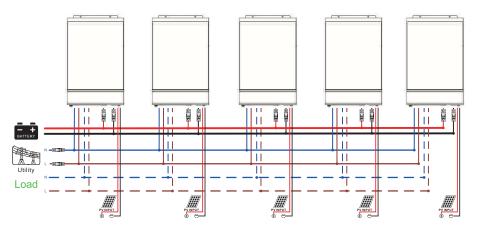


Communication Connection



Six inverters in parallel:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

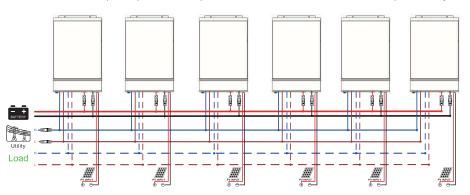

4.4 Battery Connection

CAUTION: For safety operetion and reguation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It I may not be requested to have a disconnect device in some applications, however, it's still requested to over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

Ring terminal:

WARNING! All wiring must be performed by be qualified personnel. **WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, plese use the proper recommended cable and terminal size as below.




 Π

Recommended battery cable and terminal size:


Rated	Typical	Battery		R	ing Termin	al	Torque					
Capacity	Amperage	capacity	Wire Size	Cable(mm²)	Dimen	sions	Torque value					
- оприлотну	, unporago	oupdony		Cable(IIIII)	D(mm)	L(mm)	value					
3KVA	132A	100AH	1*4AWG	22	6.4	33.2	2~3 Nm					
SKVA	132A	200AH	2*8AWG	9	6.4	29.2	2~3 NIII					
3.6KVA	165A	200AH	2*4AWG	25	8.4	33.2	5Nm					
4KVA	165A	200AH	2*4AWG	25	8.4	33.2	5Nm					
5.5KVA	121A	121A	121A	121A	1211	1211	200AH	1*2AWG	34	6.4	39.2	2~3 Nm
5.5KVA					200AH	2*6AWG	14	6.4	33.2	2~3 NIII		
6.2KVA	124A	200AH	1*2AWG	38	8.4	39.2	5Nm					
0.2KVA	124A	200AH	2*4AWG	25	8.4	33.2	JIVIII					
11KVA	228A	250AH	1*3/0AWG	85	8.4	54	5Nm					

please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.

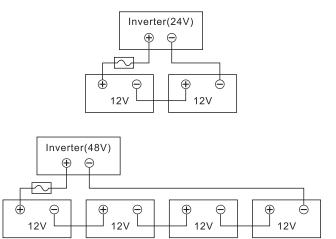

2. Insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 2 Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals. Recommended tool: #2 Pozi Screwdriver

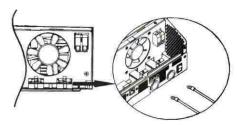



WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.



CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive(+) must be connected to positive(+) and negative(-) must be connected to negative (-).

4.5 AC Input Output Connection

CAUTION!! Before connecting to AC input power source, please Install a separate AC breaker between inverter and AC input power source. This will ensure the Inverter can be disconnected during maintenance and fully protected from over current of AC input. The recommended spec of breaker is 32A for 24V system and 63A for 48V system.

CAUTION!! There are two terminal blocks with "IN" and "OUT" markings. Please do NOT misconnect input and output connectors.

WARNING! All wiring must be performed by qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggested cable requirement for AC wires


Rated Capacity	Gauge	Torque value
3KVA	12AWG	1.2~1.6Nm
3.6KVA	12AWG	1.2~1.6Nm
4KVA	12AWG	1.2~1.6Nm
5.5KVA	10AWG	1.4~1.6Nm
6.2KVA	10AWG	1.4~1.6Nm
11KVA	8AWG	1.4~1.6Nm

Please follow below steps to implement AC input/ output connection


- 1. Before making AC input/output connection be sure to open DC protector or disconnector first.
- 2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N3 mm.

Three inverters in parallel:

Power Connection(Each photovoltaic panel needs to be connected to an independent system)

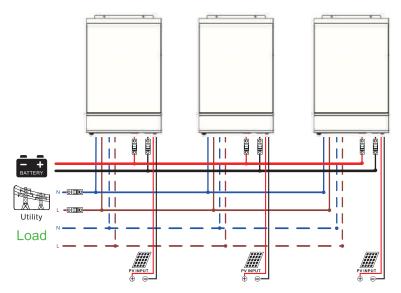


Communication Connection

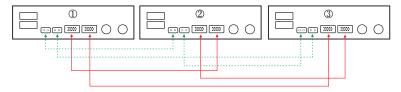

Four inverters in parallel:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

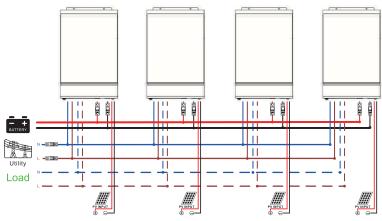

Recommended battery capacity


Inverter parallel numbers	2	3	4	5	6	7	8	9
Battery Capacity for 3KW	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for 3.6KW	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for 4KW	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for 5.5KW	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for 6.2KW	400AH	600AH	800AH	1000AH	1200AH	1400AH	1600AH	1800AH
Battery Capacity for 11KW	500AH	750AH	1000AH	1250AH	1500AH	/	/	/

WARNING! Be sure that all inverters will share the same battery bank. Otherwise, the inverters will transfer to fault mode.


2-1. Parallel operation in single phase

Two inverters in parallel:

Power Connection (Each photovoltaic panel needs to be connected to an independent system)

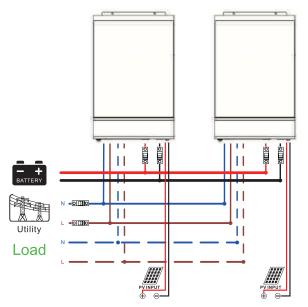


Communication Connection

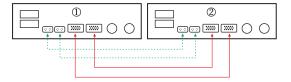

- 3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor(((a))) first.
 - **⊕**→Ground(yellow-green)
 - L→LINE(brown or black)

N→Neutral (blue)

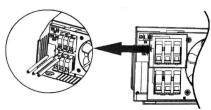



WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Make sure the wires are securely connected

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/ charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

4.6 PV Connection

PV Connection(Only apply for the model with solar charger)

CAUTION:Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Typical Amperage	Gauge	Torque Value
30A	12AWG	1.4~1.6Nm

PV module selection:

When choosing the right PV module, be sure to first consider the following requirements:


The open circuit voltage (Voc) of the PV modules does not exceed the maximum PV array open circuit voltage of the inverter. The maximum supply voltage of the PV modules should be close to the optimal PV access voltage range of the inverter for best performance. If one PV module cannot meet this requirement, it is necessary to connect multiple PV modules in series.


Model	3024SMH	3624SMH	4024SMH	5548SMH	6248SMH	11048MH
PV Charging Mode	Mode MPPT MPPT MPPT MPPT		MPPT	MPPT	MPPT Dual MPPT	
MAX.PV Input Power	5000W	6500W	6500W	8500W	8500W	2*5500W
MPPT Tracking Range						90~500Vdc
Best voltage	300~400V	300~400V	300~400V	360~430V	360~430V	300~400V
MAX.PV Input Voltage	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc
PV max input current	18A	27A	27A	27A	27A	18A/18A
MAX.PV Charging Current	100A	120A	120A	100A	120A	150A
MAX.AC Charging Current	60A	100A	100A	100A	100A	150A
MAX.Charging Current	100A	120A	120A	100A	120A	150A

PV Module Wire Connection

Please follow below steps to implement PV module connection:

- Remove insulation sleeve 10 mm for positive and negative conductors.
- 2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool
- 3. Fix wire cover to the inverter with supplied screws as shown in below chart.

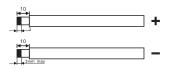

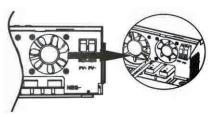

4. Check correct polarity of wire from PV modules and PV input connectors. Then, connect positive pole(+) of connection wire to positive pole(+) of PV input connector. Connect negative pole(-) of connection wire to negative pole(-) of PV input connector. Screw two wires tightly in clockwise direction. Recommended tool: 4mm blade screwdriver.

4.7 Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.



Recommended AC input and output cable size for each inverter:

Rated Capacity	AWG no.	Torque
3KW	12AWG	1.2~1.6Nm
3.6KW	12AWG	1.2~1.6Nm
4KW	12AWG	1.2~1.6Nm
5.5KW	10AWG	1.2~1.6Nm
6.2KW	10AWG	1.2~1.6Nm
11KW	8AWG	1.4~1.6Nm

You need to connect the cables of each inverter together. Take the battery cables for example: You need to use a connector or bus-bar as a joint to connect the battery cables together, and then connect to the battery terminal. The cable size used vfrom jointto battery should be X times cable size in the tables above. indicates the number of inverters connected in parallel.

Regarding AC input and output, please also follow the same principle.

WARNING!! Make sure all output N wires of each inverter must be connected all the time. Otherwise, it will cause inverter fault in error code #72.

CAUTION!! Please install the breaker at the battery and AC input side. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of battery or AC input.

1 unit* 150A/70VDC 150A/70VDC 300A/70VDC

Recommended breaker specification of battery for each inverter:

Rated Capacity	1 unit*	Rated Capacity
3KW	150A/70VDC	5.5KW
3.6KW	200A/70VDC	6.2KW
4KW	200A/70VDC	11KW

^{*}If you want to use only one breaker at the battery side for the whole system, the rating of the breaker should be X times current of 1 unit." X " indicates the number of inverters connected in parallel.

Recommended breaker specification of AC input with single phase:

		-		· ·				
Rated Capacity	2 units	3 units	4 units	5 units	6 units	7 units	8 units	9 units
3KW	80A/	120A/	160A/	200A/	240A/	280A/	320A/	360A/
	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC
3.6KW	80A/	120A/	160A/	200A/	240A/	280A/	320A/	360A/
	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC
4KW	80A/	120A/	160A/	200A/	240A/	280A/	320A/	360A/
	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC
5.5KW	80A/	120A/	160A/	200A/	240A/	280A/	320A/	360A/
	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC
6.2KW	80A/	120A/	160A/	200A/	240A/	280A/	320A/	360A/
	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC	230VAC
11KW	120A/ 230VAC	180A/ 230VAC	240A/ 230VAC	300A/ 230VAC	360A/ 230VAC	1	1	/


Note1: Also, a circuit breaker should be installed at the AC input of each inverter, and the selection of the circuit breaker should refer to the AC input current of the machine nameplate.

Note2: Regarding three-phase system, you can use 4-pole breaker directly and the rating of the breaker should be compatible with the phase current limitation from the phase with maximum units.

Appendix I: Parallel function

1. Mounting the unit

When installing multiple units, please follow below chart.

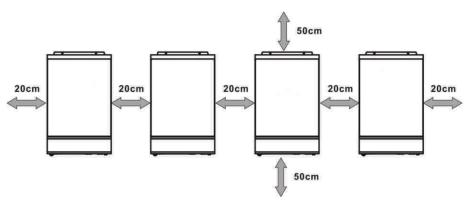

NOTE: For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx.50 cm above and below the unit, Be sure to install each unit in the same level.

2. Wiring Connection

NOTICE: It's requested to connect to battery for parallel operation.

The cable size of each inverter is shown as below:

Recommended battery cable and terminal size for each inverter:

Rated		R	T		
Capacity	Wire Size	Cable	Dimen	sions	Torque value
Oupdonly		mm ²	D (mm)	L (mm)	Value
3KW	1*4AWG	22	6.4	33.2	2~3Nm
3.6KW	2*4AWG	25	8.4	33.2	5Nm
4KW	2*4AWG	25	8.4	33.2	5Nm
5.5KW	1*2AWG	38	6.4	39.2	2~3Nm
6.2KW	1*2AWG	38	8.4	39.2	2~3Nm
11KW	1*3/0AWG	85	8.4	54	5Nm


Ring terminal:



WARNING: Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between inverter and battery to cause parallel inverters not working.

5 OPERATION

5.1 Power ON/OFF

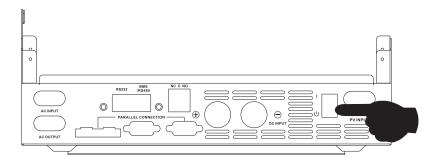

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

5.1.1 Steps to start up

Connect the battery that meets the requirements (battery voltage needs to beyond 23V) or AC (AC needs to confirm the suitable input range depend on the output mode), then you can start up the inverter.

Mains power on

Connect to normal AC power, press the switch, the system will automatically turn on. If you set AC output power priority, after waiting for a period of time, the panel will display AC mode that represents turn on the machine successfully, then will enter the AC mode.

When the normal mains power is connected and press the power-on button then the system will automatically power on. If it is set as AC output priority, after a period of time, the panel will display the AC mode to indicate that the power-on is complete and enter the AC mode.

Battery boot

Connect to battery, press the power-on button to establish a working power source.


The system will automatically turn on, after waiting for a period of time, the panel will display battery mode that represents turn on the machine successfully, then will enter the battery mode.

5.1.2 Shutdown steps

When the system is in battery mode or AC mode output, press the switch again, then the system will be turned off.

5.2 Operation and Display Panel

The operation and display panel, shown in below chart , is on the front panel of the inverter. It includes three indicators , four function keys and a LCD display, indicating the operating status and input/output power information.

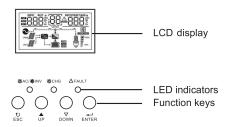

LED Indicator

LED Indicator			Messages
★ AC/ ★ INV	Croon	Solid On	Output is powered by utility in Line mode.
₩ AU/ ₩·INV	C/POINV Green	Flashing	Output is powered by battery or PV in battery mode.
× 0110	Yellow	Solid On	Battery is fully charged.
* CHG		Flashing	Battery is charging.
A FAILT	Dad	Solid On	Fault occurs in the inverter.
A FAULT Red	Kea	Flashing	Warning condition occurs in the inverter.

Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

LCD Display Icons



7.Technical datasheet

Model		3024SMH	3624SMH	4024SMH	5548SMH	6248SMH	11048MH		
	Input Source	es	L+N+PE						
Input	Rated Input	Voltage	220/230/240VAC						
·	Voltage Range Freqency		90-280VAC±3V(APL Mode)170-280VAC±3V(UPS Mode)						
				50Hz/60Hz(Auto Adaptive)					
	Rated	The battery inverts	3000W	3600W	4000W	5500W	6200W	11000W	
	power	Photovoltaic inverter	3600W	4500W	4500W	6500W	6500W	12000W	
	Output Volta	ge	220/230/240VAC±5%						
Output	Output Frequ	iency	50/60Hz±0.1% Pure Sine Wave						
•	Waveform								
		e (adjustable)		omputers(UP				1	
	Peak Power		6000VA	7200VA	8000VA	11000VA	12400VA	22000VA	
	Overload o	apacity	E	3attery mode11 40	s@105%~150% 0ms@>200%	% Load;2s@15 Load	0%~200% Load	d;	
	Output Volta				220/230/24	10VAC±5%			
	Feed into t voltage rar	nge			170-26	65VAC			
Grid- connected	Feed into t frequency				49-51±1Hz	/59-61±1Hz			
operation	Nominal or	utput current	13A	15.7A	17.4A	23.9A	26.9A	47.8A	
	Power Fac	tor Range			> 0.99				
	Maximum efficiency	conversion (DC/AC)			98%				
Battery	Battery Vota	·	24Vdc	24Vdc	24Vdc	48Vdc	48Vdc	48Vdc	
	Constant Ch Voltage(Adju	ustable)	28.2Vdc	28.2Vdc	28.2Vdc	56.4Vdc	56.4Vdc	56.4Vdc	
	Floate Charg Voltage(Adji	ging ustable)	27Vdc	27Vdc	27Vdc	54Vdc	54Vdc	54Vdc	
	PV Charging		MPPT	MPPT	MPPT	MPPT	MPPT	MPPT Dual MPPT	
	MAX.PV Inp	ut Power	5000W	6500W	6500W	8500W	8500W	2*5500W	
	MPPTTrack	ing Range	60~500Vdc			90~500Vdd			
	Best voltage	,	300~400V	300~400V	300~400V	360~430V	360~430V	300~400V	
Chargers	MAX.PV Inp	ut Voltage	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc	500Vdc	
	PV max inp	ut current	18A	27A	27A	27A	27A	18A/18A	
	MAX.PV Cha	arging Current	100A	120A	120A	100A	120A	150A	
	MAX.AC Ch	arging Current	60A	100A	100A	100A	100A	150A	
	MAX.Chargi	ng Current	100A	120A	120A	100A	120A	150A	
Display	LCD interfa	ace		CAN disp	ay running mod	de/load/input/o	utput, etc.		
	RS232				Baud R	ate2400			
Interface	Extend the communic	socket ation interface	Lithium Battery BMS Communication Card WifiCard, Dry Contact						
morrage	Parallel m	achine interface	No parallel Parallel Machine function (network) function				1		
	Operating Te	mperature			-10~	50°C			
	Humidity				20%~95%(No	n-condensing)			
Environments	StorageTem	perature			-15~	-60°C			
	Altitude		Altiude N	ot Over 1000m	,Derating over	1000m,Max 40	00m, Refer to	EC62040	
	Noise					≤50db			
Stand	ards and ce	rtification		EN-IEC 60	335-1,EN IEC	60335-2-29, IE	C 62109-1		

6.Trouble removeal

Problem	LCD/LED/Buzzer	Explanation/Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	Re-charge battery. Replace battery.
No response after power on.	No indication	The battery voltage is far too low.(<1.4V/Cell) Internal fuse tripped.	1.Contact repair center for replacing the fuse. 2. Re-charge battery.
	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Replace battery. Check if AC breaker is tripped and AC wiring is connected well.
Mains exist but the unit works in battery mode.	Green LED is flashing	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied)is working well or if input voltage range setting is correct.(UP>sppliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
		Overload error. The inverter is overload 105% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 07	If PV input voltage is higher than specification, the output power will be derated. At this time, if connected loads is higher than derated output power, it will cause overload.	Reduce the number of PV modules in series or the connected load.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or
Buzzer beeps	Fault code 02	Internal temperature of inverter component is over 100°C	whether the ambient tem perature is too high.
continuously and red LED		Battery is over-charged	Return to repair center.
is on.	Fault code 03	The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
	Fault code 01	Fan fault	Replace the fan.
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	Reduce the connected load. Return to repair center
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.
	Fault code 51	Over current or surge.	Restart the unit, if the error
	Fault code 52	Bus voltage is too low.	happens again, please
	Fault code 55	Output voltage is unbalanced.	return to repair center.
	Fault code 59	PV input voltage is beyond the specification.	Reduce the number of PV modules in series.

Icon		Fund	ction	
Input source information				
AC	Indicates the AC input			
PV1		st PV panel input		
Indicates the 2 nd PV panel input Left digital display information				
INPUT BATT				
120 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	Indicate input voltage, input frequency, battery voltage, V1 voltage, PV2 voltage, charger current			
Middle digital display info	rmation			
88	Indicates the s	etting programs		
	Indicates the w	arning and fault	codes.	
[88]	Warning: Flash	ning (88) ^A with		
	Fault: display	with far	ult code	
Right digital display inforr	nation			
OUTPUTBATTLOAD M WA VA VA Hz		tput voltage, out V, PV1 charger p g current.		
Battery information				
	Indicates battery level by 0-24%,25-49%,50-74% and 75-100% and charging status.			
AGM FLD USER	Indicates the battery type: AGM, Flooded or User-defined battery.			
Load information				
OVER LOAD	Indicates overl	oad.		
	Indicates the loa	ad level by 0-24%	%,25-50%,50-74%	%,and 75-100%.
	0%~25%	25%~50%	50%~75%	75%~100%
100%				
Mode operation information	on			
•	Indicates unit connects to the mains.			
PV1	Indicates unit connects to the 1 st PV panel			
	Indicates the solar charger is working			
	Indicates the DC/AC inverter circuit is working.			
Mute operation				
	Indicates unit a	larm is disabled		

Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, charging current, battery voltage, output voltage, output frequency, load percentage, load in Watt, load in Watt, DC discharging current, main board firmware version and SCC firmware version.

Select item	LCD display
Input voltage and output voltage (Default Display Screen)	Input Voltage=230V, output voltage=230V OUTPUT OUTPU
Input frequency and output frequency	Input frequency=50.0Hz, output frequency=50.0Hz OUTPUT SOLUTION PV1 USER 100% 25%
Battery voltage and output voltage	Battery Voltage=48.0V,output voltage=230V OUTPUT OUT
Battery voltage and load percentage	Battery Voltage=48.0V,load percentage 68% BATT LOAD LOAD V SOLUTION 25%

5.5.2 Alarm Descriptions

Alarm: The red LED flashes, and the LCD displays an alarm code, the inverter does not enter the failure mode

Alarm Indicator

Alarm Code	Alarm Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	<u>[</u>]
02	Over temperature	None	<u>~</u> 50]
03	Batery is over-charged	Beep once every second	<u> </u>
04	Low battery	Beep once every second	<u>@Y</u> ^
07	Overload	Beep once every 0.5 second	OVERLOAD 100 155
10	Output power derating	Beep twice every 3 seconds	
15	PV energy is low.	Beep twice every 3 seconds	
16	High AC input (>280VAC) during BUS soft start	None	[16] ^A
<i>E9</i>	Battery equalization	None	<u>~</u> P3]
₽ ₽	Battery is not connected	None	[P^ (T)

5.5.3 Code Reference

Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

Code		Description
60	⚠	If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.
61	Δ	Communication lost After battery is connected, communication signal is not detected for 1 minutes, buzzer will beep. Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately.
69	Δ	If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.
70	⚠	If battery status must to charge after the communication between the inverter and battery is successful, it will show code 70 to charge battery.
71	⚠	If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop discharge battery.

5.5 Fault and alarm description

5.5.1 Faults Descriptions

C.O. 11 dans Booonpar

Fault: The inverter enters the fault mode, the red LED light is always on and the LCD displays the fault code.

Fault Reference Code


Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	
02	Over temperature or NTC is not connected well.	_CO_
03	Battery voltage is too high.	[03]
04	Battery voltage is too low.	[14]
05	Output short circuited or over temperature is detected by internal converter components.	(DS)
06	Output voltage is too high.	<u>60</u>
07	Over load time out.	(T)_
08	Bus voltage is too high	[08]
09	Bus soft start failed	(D9)
51	Over currents or urge	5
52	Bus voltage is too low	[52]
53	Inverter soft start failed	<u>53,</u>
55	Over DC voltage in AC output	<u>(55)</u>
57	Current sensor failed	57,
58	Output voltage is too low	<u>58</u> ,
59	PV voltage is over limitation	<u> 59</u>

Battery voltage and load in VA	Battery Voltage=48.0V, load in VA=1.08kVA LOAD LOAD VA PV1 100%
Battery voltage and load in Watt	Battery Voltage=48.0V, load in Watt=1.88kW BATT LOAD LOAD
PV1 voltage and PV1 charger power	PV1 Voltage=360V, charging power=1.58kW OUTPUT OUTPU
Charger current and DC discharging current	Charging current=30A, discharging current=0A INPUT BATT OUTPUTBATT A PV1 DSER OUTPUTBATT A 25%
PV energy generated today	Today energy = 6.3kWh S No. 100% Pv1 100% 25%

PV energy generated this month	This month energy = 358kWh.
PV energy generated this year	This year energy = 8.32MWh What is a second
PV energy generated totally	Total energy = 13.9MWh Wh PV1 PV1 ISSER MWh 25%
Real date	Real date Nov 28, 2016.
Real time	Real time 13: 20.


X When to Equalize

In stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

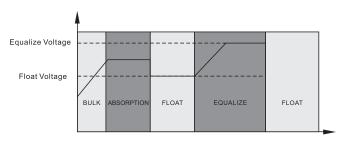


X Equalize charging time and timeout


In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

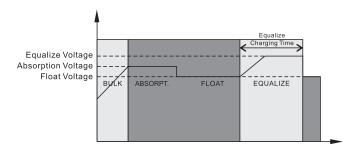

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

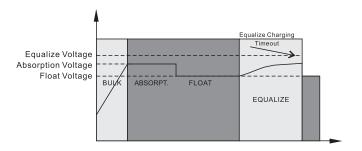

When the BMS/485 communication interface is externally connected, as shown in the following figure:

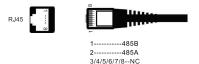

Communication Connection

Please use supplied communication cable to connect to inverter and PC. Please install a monitoring software on the computer.

Dry Contact Signal

There is one dry contact (3A/250VAC) available on the rear panel. It could be used to deliver signal to external device when battery voltage reaches warning level.

Unit Status	Condition		Dry contact	port: NC C NO	
				NC & C	NC & C
Power Off	Unit is off and	Unit is off and no output is powered.		Close	Open
		Normal	Battery voltage< Low DC warning voltage	Open	Close
Power On batt	Output is powered from	mode	Battery voltage> Float charging voltage		Open
	battery or solar.	Solar first	Battery voltage< Solar to AC voltage	Open	Close
		mode	Battery voltage> AC to DC voltage	Close	Open


5.4 Battery Equalization Description

Equalization function is added into charge controller, It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.

X How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

- 1. Setting equalization interval in program 35.
- 2. Active equalization immediately in program 36.

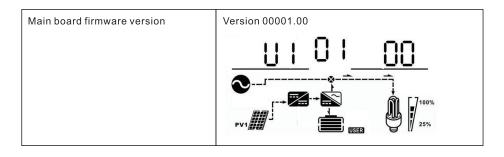

Operating Mode Description

Operating mode	Behaviors	LCD display
Standby mode Note: *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output. *Power swing mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected.	No output power, solar or utility charger available	Battery is charged by PV energy. Battery is charged by PV energy. Battery is charged by PV energy and feed PV energy grid. No charging.
Line mode	Output power from utility. Charger available	Utility charges battery and provides power to load. Utility and battery power provide power to load.

	I	
	Output power from utility. Charger available	PV energy, battery power and utility provide power to load.
Line mode	Output power from utility. Charger available	PV energy and utility charge battery, and utility provides power to load. PV energy charges battery, utility and PV energy provide power to the load. PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid.
Battery mode	Output power from battery or PV	PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid. PV energy and battery energy supply power to the load. Battery provides power to the load.
Only PV mode	Output power from PV	PV provides power to the load.

		Disable(default)	Use
60	Dual output	6 <u>0 L2F</u>	6 <u>0 L20</u>
		Default setting:44.0V	
		<u> </u>	<u>" </u>
61	Enter the dual output functional voltage point	Default setting:22.0V	
	Tunctional voltage point	<u> </u>	<u>""</u>
			than inverter setting, second Increment of each click is 0.1V.
62	Enter the dual output functional SOC point	<u>654 65 15*</u>	If any type of lithium battery is selected in program 5. If BMS capacity lower than SOC setting, second output will be cutted of.
63	Dual battery voltage recever	<u> 63, 520</u> ,	Default 52V/26V, if the battery voltage is higher than the inverter setting, the dual will be restored.
64	Dual battery SOC Recever	<u>64</u> 95.	If any type of lithium battery is selected in program 5. Default 50%, if the BMS capacity is higher than the SOC setting, the second output will be restored.
65	Setting discharge time on the second output	Disable(default)	Setting range is disable and then from 0 min to 990 min. Increment of each dick is 5 min. *If the battery discharge time achieves the setting time in program 61 and the program 60 function is not triggered, the output will be turned off.
66	Dual Recover Delay Time	<u>4+4 [56] S</u>	The value ranges from 0-60min.
00	Dual Necover Delay Time	<u>98, 995</u>	The value ranges from 0-00mm.
67	Output Open Time	<u>"4F8 6000</u>	The value ranges from 0 to 23.
68	Output Stop Time	<u>argentarian (68</u> 000	The value ranges from 0 to 23.

-18-

		00: 00(Default)		
48	Scheduled time for AC output on	MM 00 48 000 °		
			heduled Time for AC output off increment of each click is 1 hour.	
		00: 00(Default)		
49	Scheduled time for AC output off	<u> </u>	- -	
			eduled Time for AC output off crement of each click is 1 hour.	
		Mode 1	If selected, acceptable feed-in grid voltage range will be 195.5-253VAC.	
		[5 <u>0</u>] NJ	Acceptable feed-in grid frequency range will be 49-51Hz.	
		Mode 2	If selected, acceptable feed-in grid voltage range will be 184-264.5VAC.	
50	Set country customized	[5]] GEn	Acceptable feed-in grid frequency range will be 47.5-51.5Hz.	
50	regulations	Mode 3	If selected, acceptable feed-in grid voltage range will be 184-264.5VAC.	
		5 <u>0</u> 588	Acceptable feed-in grid frequency range will be 57-62Hz.	
		Mode 4(Default)	If selected, acceptable feed-in grid voltage range will be 170-264.5VAC.	
		5 <u>0</u> PRF	Acceptable feed-in grid frequency range will be 47.5-51.5Hz.	
51	Time setting-Minute	<u>-11 N 5% 00</u>	-	
	-	For minute setting, the	range is from 00 to 59.	
52	Time setting-Hour	<u> </u>		
		For hour setting, the ra	nge is from 00 to 23.	
53	Time setting-Day	<u>-d8F 23 - 01</u>		
		For day setting, the range is from 00 to 31.		
54	Time setting-Month	<u> -00 54 01</u>		
		For month setting, the r	ange is from 1 to 12	
55	Time setting-Year	<u> </u>		
		For year setting, the ra	nge is from 16 to 99.	
56	GRID-tie current	56 10 -	Increment of each click is 1A.	

5.3 LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button exit.

Setting Programs:

Program	Description	Sel	ectable option
00	Exit setting mode	Escape	
		[0 ₀] <u>SUB</u>	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.
01	Output source priority selection	[] _© S6U	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12 or solar and battery is not sufficient.
02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	60A(default)	Setting range is from 10A to maximum charging current. Increment of each click is 10A.
03	AC input voltage range	Appliances (default)	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS UPS	If selected, acceptable AC input voltage range will be within 170-280VAC.

		AGM (default)	Flooded
		[<u>05</u> 86n_	OS FLA
		User-Defined	If "User-Defined" is selected, battery charge voltage, low
		OŞ USE	DC cut-off voltage and dual cut -off voltage can be set up in program 24,26,27,29 and 61.
		LIA-protocol compatible battery	
		[0 <u>5</u>] LI R	
		Pylontech battery	
		[0 <u>\$</u> PYL_	If selected, programs of 24,26,27 and 29 will be automatically set
05	Battery type	Techfine battery	up. No need for further setting.
		[<u>05</u>] <u>E9F</u>	
		Growatt battery	
		0 <u>5</u> 6+0	
		LIB-protocol compatible battery	Select "LIB if using Lithium battery compatible to Lib protocol.
		0 <u>5</u> LI b	If selected, programs of 26,27 and 29 will be automatically se up. No meed for further setting.
		3 rd party lithium battery	If selected, programs of 26,27 and 29 will be automatically set up.
		[0 <u>5</u>] LI [No need for further setting. Please contact the battery supplier for installation procedure.
	Auto restart when	Restart disable(default)	Restart enable
06	overload occurs	<u> </u>	OB LHE
	Auto restart when over	Restart disable (default)	Restart enable
07	temperature occurs	<u> </u>	DJ FFE

38	Bat Soc Under Lock	65U (3B) 10×	If any type of lithium battery is selected in program 5. BMS low voltage SOC value, if the BMS SOC value is lower than the set value, the inverter will shut down to protect the battery.	
39	Bat Soc Turn To Ac	SEC 33, 20.	If any type of lithium battery is selected in program 5. When the working mode of the inverter is set to the battery priority mode, the inverter will be forced to enter the mains charging when the SOC of the BMS is lower than the set value.	
40	Bat Soc Turn To Dc	SER (40) 95°	If any type of lithium battery is selected in program 5. When the working mode of the inverter is set to the battery priority mode, the inverter resumes the DC working mode when the SOC of the BMS is higher than the set value.	
41	Bat Restart Soc	65F (7) 50°	If any type of lithium battery is selected in program 5. When the inverter is turned on, the SOC must be higher than the set value to work normally.	
		4 <u>3 660</u>	Solar energy provides power to charge battery as first priority.	
43	Solar supply priority	43 <u>LbU</u>	Solar energy provides power to the loads as first priority.	
4.4	Solar energy feed to grid	44 <u>6Fd</u>	Solar energy feed to grid disable.	
44	configuration	44 <u>6⊦E</u>	Solar energy feed to grid enable.	
		Notre set (Default)	Reset	
45	Reset PV energy storage	45 <u>Nrt</u>	4 <u>5 -5t</u>	
		00:00(Default)		
46	Start charging time for	■SLA 45 000°		
	AC charger		rt charging time for AC charger is crement of each click is 1 hour.	
		00: 00(Default)		
47	Stop charging time for AC charger	<u> </u>		
			neduled Time for AC output on is crement of each click is 1 hour.	

30 Battery	Battery equalization	Battery equalization Battery equalization	Battery equalization disable (default)
		If "Flooded" or "User De this program can be set	fined" is selec ted in program05, up.
		24V system default set	ting:29.2V
	Battery equalization	48V system default set	ting:58.4V
31	voltage	En3°	<u>58.4°</u>
			4.0V to 30.0V for 24V system and system. Increment of each click
33	Battery equalized time	60min (default)	Setting range is from 5min to 900min. Increment of each click is 5min.
34	Battery equalized timeout	120min (default)	Setting range is from 5min to 900min. Increment of each click is 5min.
35	Equalization interval	30days (default)	Setting range is from 0 to 90 days. Increment of each click is 1 day.
		Enable	Disable (default)
		화 <u>860</u>	7 <u>0 </u>
36	Equalization activated immediately	can be set up. If "Enable activate battery equaliza will shows "	enabled in program 30, this program e" is selected in this program, it's to tion immediately and LCD main page "Disable" is selected, it will cancel ntil next activated equalization time m 35 setting. At this time, " [7] " will in page.
37	BMS Function Switch	off(default)	Whether to enable the BMS
37	BMS Function Switch	6n5 [3]] ON	communication function

08	ECO function: System will temporarily stop when the load is low in battery mode.	disable (default) $ \begin{array}{c c} \hline ECO & OB & SC \\ \hline enable & OB & SE \\ \hline \end{array} $	
09	Output frequency	50Hz(default) 09 50 н₂	60Hz 0960 _{#±}
10	Output voltage	220V 10 220° 240V 10 240°	230V (default) 0
11	Maximum utility charging current Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging current from program 02 for utility charger.	30A(default)	Setting range is 2A, then from 10A to max.AC charging current. Increment of each click is 10A.
12	Setting voltage point back to utility source when selecting"SBU priority" in program 01.	Available options in 24 23.0V (default) Particle Available options in 48 46V (default) BATT CV BATT CV	Setting range is from 22V to 25.5V. Increment of each click is 0.5V.
13	Setting voltage point back to battery mode when selecting"SBU priority"in program 01.	Available options in 48 Battery fully charged	27V(default) 27V(default) 29V. Increment of each click is 0.5V.

		•	working in Line, Standby or Fault n be programmed as below:
		Solar first	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
16	Charger source priorit: To configure charger source priority	Solar and Utility(default)	Solar energy and utility will charge battery at the same time.
		Only Solar	Solar energy will be the only charger source no matter utility is available or not.
		_	working in Battery mode, only solar y. Solar energy will charge d sufficient.
18	Alarm control	Alarm on (default)	Alarm off B 60F
19	Auto return to default display screen	Return to default display screen (default)	If selected, no matter how users switch display screen, it wil automatically return to defaultl display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default)	Backlight off
22	Beeps while primary source is interrupted	Alarm on (default)	Alarm off ROF
23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default)	Bypass enable
24	Battery low voltage • If battery power is only power source availableinverter will alarm.	Battery low voltage 44. Setting range is from 20 and 40.0V-54.0V for 48\	.0V-27.0V for 24V system

25	Record fault code	Record enable (default) Record disable Record disable
1 76 1	Bulk charging voltage (C.V voltage)	24V system default setting:28.2V 26 28.2v 48V system default setting:56.4V
		If self-defined is selected in program 5,this program can be set up. Setting range is from 24.0V to 30.0V for 24V system and 48.0V to 60.0V for 48V system. Increment of each click is 0.1V.
27	Floating charging voltage	24V system default setting:27.0V FLU 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
28	Reset factory setting	default:
29	Low DC cut-off voltage: If battery power is only power source availableinverter will shut down. If PV energy and battery power are available, inverter will charge battery without AC output.	24V system default setting:21.0V 48V system default setting:42.0V 48V system default setting:42.0V If self-defined is selected in program 5, this program can be set up. Setting range is from 20.0V to 26.0V for 24V system and 40.0V to 52.0V for 48V system. Increment of each click is 0.1V Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.